


SOLDERING INSTRUCTIONS

Step 1: Use tape to fasten battery holder to board.

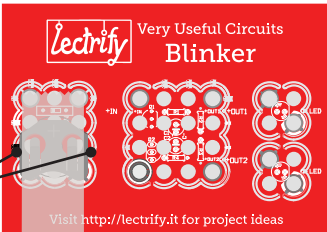

Solder at pads, remove tape.



Step 2: Insert Components and solder from back of board


Switch



R1 & R4
100KOhm



R2 & R3
220Ohm

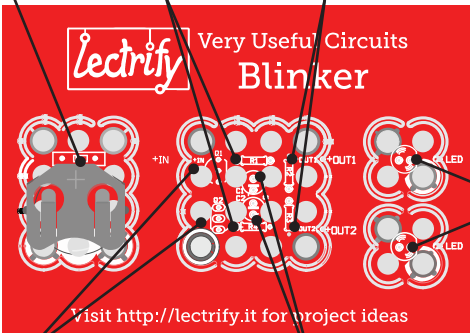

LEDs
Positive lead
(longer wire)
to left (red) side

Transistors
Follow silkscreen
to orient correctly.




Electrolytic
Capacitors

Negative sides facing
each other (light bar).



Step 3: Test circuit

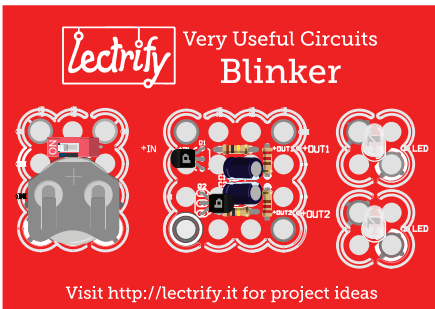

Visit www.lectrify.it
for project ideas.